



Parts Included

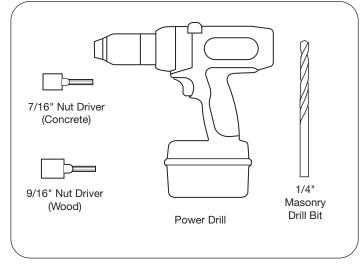


**Tools Required** 

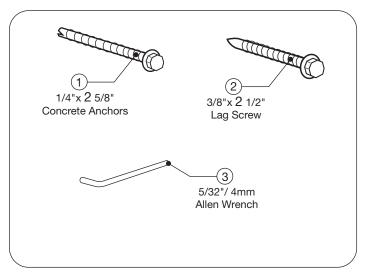


Hardware Included

## JumpSeat® 90 Floor Installation




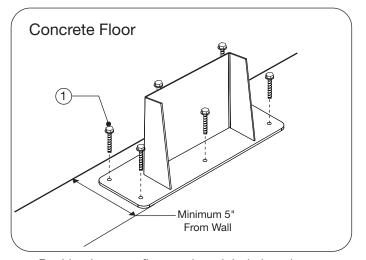


- Position base on floor and mark hole locations.
- Punch or cut carpet to avoid runs.
- Drill 1/4" holes approximately 3" deep.
- Use concrete anchors to attach base to floor.

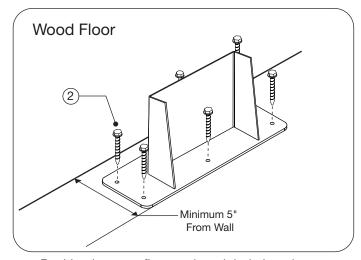

- Position base on floor and mark hole locations.
- Punch or cut carpet to avoid runs.
- Use lag screws to attach base to floor.

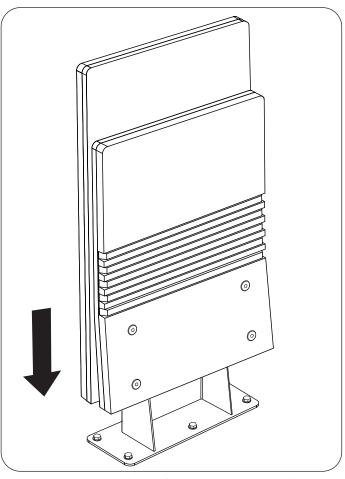

- Loosen bolts on lower front panel with supplied allen wrench.
- Slide JumpSeat over mounting base until contact is made with base plate.

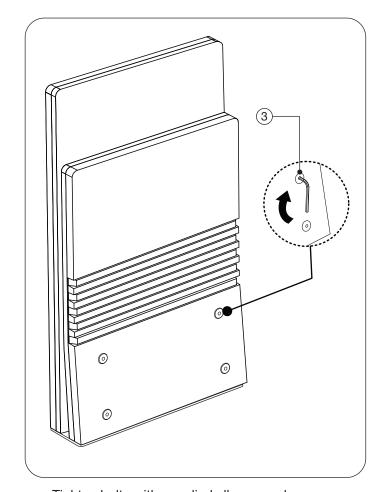

• Tighten bolts with supplied allen wrench.